## MEDSTERN CANADA LLP



Superalloys: Rhenium (Re) is a key component in second and third-generation superalloys, crucial for, e.g., power plants. It reduces creep rates through solid solution strengthening and influences the formation of strengthening phases.

## RELIABLE RHENIUM

Cornerstone of Industry, Innovation



#### HYDROCARBON INDUSTRY

**High-Octane Gasoline Production** 



# Platinum-rhenium bimetallic catalysts are widely used in catalytic reforming, a process that upgrades low-octane petroleum ether into high-octane gasoline. The platinum primarily acts as a dehydrogenation and hydrogenation catalyst, while Re stabilizes the catalyst, preventing Pt sintering and formation of unwanted carbon deposits.

#### LABORATORY SCIENCE

Mass Spectrometry, Pharmaceuticals



Rhenium filaments are frequently used in mass spectrometry for thermal ionization due to their excellent mechanical stability and ability to withstand high temperatures. Mass spectrometry (MS) is a versatile analytical technique widely used in drug discovery, environmental monitoring, the food industry, and manufacturing.

## INVESTMENT OPPORTUNITIES



Sustainable Mining, Metals, and Galvanic Industries

Canada boasts a diverse range of minerals, including traditional commodities like base metals, as well as critical minerals. The country is home to a large number of mining companies and is a leading destination for international mining finance. Foreign direct investment (FDI) in the Canadian mining sector was \$65.1 billion in 2022.

Status 2024/2025


ACCESS RESOURCES, GROW SUPPLY BASE



METAL, GALVANIC INDUSTRIES

LOGISTIC INFRASTRUCTURE

Including extraction, services, primary and downstream manufacturing, the Canadian Mining and Metals Sector contributed a total of \$108.5 billion to GDP in 2022. Canada has a well-established mining sector with a supportive regulatory framework, including established stock exchanges. Investors who can guarantee offtake agreements contribute significantly to the economy. Reliable and robust technologies are the key to leaving behind only clean water, healthy landscapes, and achieving greater competitive strength through value-added mining and metal commodities.

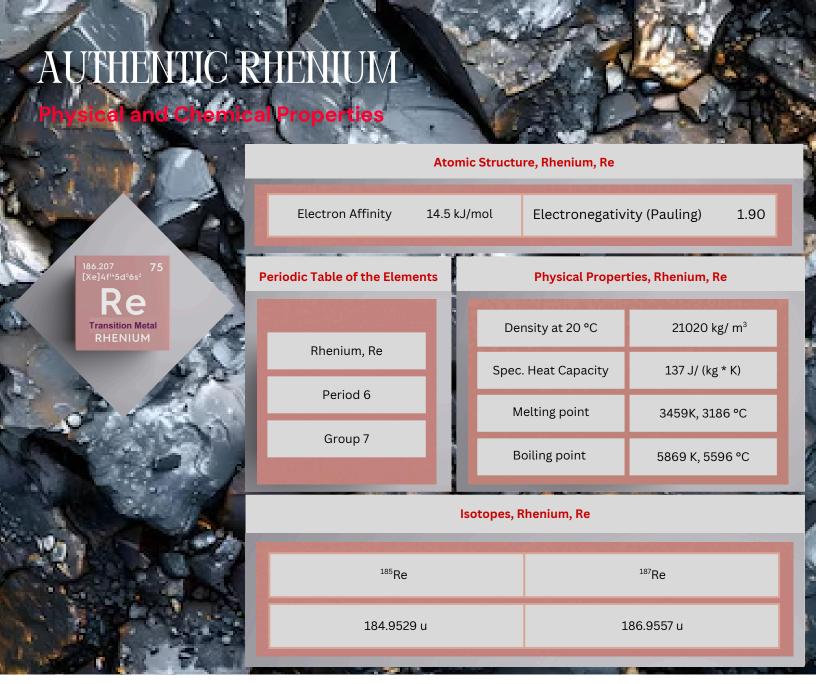

#### **PHYSICAL**



Appearance: Silvery-white, dense metal

Crystal Structure: Hexagonal close-packed (hcp)
Hardness: 7.0 Mohs Scale, depending on purity
Malleability: Can be hammered into thin sheets

Conductivity: good conductivity

Young's Modulus: 463 GPa

#### **CHEMICAL**



Corrosion Resistance: excellent resistance to corrosion in many environments, high temperature Thermal Expansion (25°C): 6.2  $\mu$ m (m<sup>-1</sup> · K<sup>-1</sup>) Common Oxidation States: from -3 to +7 Rhenium Compounds: e.g., Rhenium (VII) Oxide (Re<sub>2</sub>O<sub>7</sub>), Rhenium trioxide (ReO<sub>3</sub>), Ammonium Perrhenate (NH<sub>4</sub>ReO<sub>4</sub>)...

#### RHENIUM-BEARING MINERAL Industry, Raw Materia Molybdenite **Powellite** Rheniite **Columbite** (MoS<sub>2</sub>) $((Fe,Mn)Nb_2O_6)$ (CaMoO<sub>4</sub>) (ReS<sub>2</sub>) Molybdenum disulfide **Sulfide Mineral Calcium Molybdate Iron-Manganese Oxide** Strunz: Strunz: Strunz: Strunz: 7.GA.05 2.EB.35 2.EA.30 4.DB.35 FROTH FLOTATION Ore Preparation Phase: From Gangue Material to Molybdenum Disulfide Ore Concentrate Crushing Classification **Beneficiation** Grinding ☐ Jaw-, Cone-, Impact Crushers, Ball Mills ☐ Hydrocyclones, screens ☐ Froth flotation, gravity spirals ☐ Smaller sized rocks, finer fragments ☐ Molybdenum content in mined ore, 0.01 - 0.25% Mo

Slurry Preparation

☐ Aeration, foam layer skimming, dewatering

**Froth Flotation Process** 

☐ Addition of water, collectors, e.g., kerosene, diesel oil, xanthates, frothers, e.g., methyl isobutyl carbinol ☐ MoS₂ concentrate often > 57 % Mo

☐ Making MoS₂-containing particles hydrophobic

## RHENIUM PROCESSING

#### The Metal and Galvanic Industries

	F	rom MoS <sub>2</sub> to Rheniu	ım (VII) oxide (Re <sub>2</sub>	O <sub>7</sub> )		
Oxidative Roasting						
☐ Molybdenite co	☐ Molybdenite concentrate (MoS₂) ☐ Temp: 500 – 700 °C ☐ (Re₂O₂) in roaster dust, flue dust, and fly ash					
$\square$ 2MoS <sub>2</sub> + 7O <sub>2</sub> -> 2MoO <sub>3</sub>	+ 4SO <sub>2</sub>	$_{2} + 15O_{2} \rightarrow 2Re_{2}O_{7} +$	8SO <sub>2</sub> <b>G</b> E.g., gase	ous rhenium (VII) oxide (	Re <sub>2</sub> O <sub>7</sub> ) in SO <sub>2</sub> stream	
The gas stream composition is determined by factors such as temperature, oxygen partial pressure, presence of other reactants and is measured using precision gas sensors. The process layout configuration and selection of the adsorbent material, dependent on the gas stream composition of rhenium-bearing compounds, including ReS <sub>2</sub> , Re <sub>2</sub> S <sub>7</sub> , ReO <sub>2</sub> , Re <sub>2</sub> O <sub>7</sub> , etc.						
From Rhenium (VII) oxide ( $Re_2O_7$ ) to Rhenium trioxide ( $ReO_3$ )						
Redox Reactio	on	Press	ing	Sinterio	ng	
$\square$ Re <sub>2</sub> O <sub>7</sub> + CO $\rightarrow$ 2ReO	<sub>3</sub> + CO <sub>2</sub> □ Comp	acting via Powder In	ection Molding (PIN	M) 🗖 Rhenium trioxide,	ReO <sub>3</sub> : > 99.9% grade	
☐ Temp: 200 °C, CO redu						
Wet scrubber: multip	le-stage, gas-liq	uid scrubbing colu	mns, from (Re <sub>2</sub> O <sub>7</sub> )	to Ammonium Perrhen	ate, NH <sub>4</sub> ReO <sub>4</sub>	
Leaching	Filtration	Evaporation	Sorption	Precipitation	Filtration	
$\square$ Re <sub>2</sub> O <sub>7</sub> + H <sub>2</sub> O + 2NH <sub>3</sub> ->	2 NH₄ReO₄ ☐ Pr	ocessing to liquid con	centrate 🖵 Scrubb	ing liquid 🔲 Ammonium	Perrhenate, NH <sub>4</sub> ReO <sub>4</sub>	
☐ Temp: 80 - 90 °C, NH	3-containing water	r□ Supersaturated N	H₄ReO₄ ☐ Sorbent	material, filler 🗖 Precip	itant   Crystals	
mirror and a second	喜喜			Metallic Rheniu		
			Inpu	Manufacturi t material: Ammonium P		
		THE RESERVE TO THE RE		the state of the state of		

## TRANSPORTATION SUPPORT SERVICES



## MODES OF TRANSPORTATION

## TRANSLOADING FACILITIES

## LOGISTICS SUPPORT SERVICES

- Trucks: for short distance hauls and last-mile delivery
- Trains: for long-distance transport of products, goods
- Ships: for large volumes of commodities via ocean freight
- Access to distribution centers, warehouses, and storage space
- Secure transfer of commodities between modes of transportation, e.g., rail-to-ship
- Optimized shipping processes, analysis, including route planning, cost calculation, carrier identification, shipment tracking. and tracing for precision, real-time product movement

## RHENIUM PRODUCT FORMATS

**Industrial Formats for Rhenium, Re** 

Tailored product formats can be made accessible to B2B Partners, based on achieved off-take agreements. The highlighted products on this page are a selection of possible product alternatives available for trade.

	rioxide, ReO₃ r, Tablets	Ammonium Perrhenate, NH4ReO4 Powder, crystalline Granules		
Sheets, Flats	Foils	Rods	Ingots	
Rhenium-Platinum Alloys, Pt-Re	Rhenium-Nickel, Alloys, Ni-Re	more applications		
The state of the s				
			CESTION AND DESIGNATION OF THE PERSON OF THE	

## RHENIUM COMMODITIES

**Classes and Standards** 

High-Purity Rhenium					
<ul> <li>High-Purity Rhenium, unalloyed</li> <li>CAS# 7440-15-5   Re</li> <li>Ingots, bars, wires, flakes, foils</li> <li>Purity ≥ 99.999%, 5N Very High Purity</li> <li>Purity ≥ 99.99%, 4N High Purity</li> <li>Purity ≥ 99.9%, 3N High Purity</li> </ul>					
Chemical compounds					
<ul> <li>High-Purity APR, NH<sub>4</sub>ReO<sub>4</sub></li> <li>CAS# 13598-65-7   NH<sub>4</sub>ReO<sub>4</sub></li> <li>Powders, crystalline granules, crystals</li> <li>Purity ≥ 99.999%, 5N Very High Purity</li> <li>Purity ≥ 99.99%, 4N High Purity</li> <li>Purity ≥ 99.9%, 3N High Purity</li> <li>Purity ≥ 99.0%, 2N Trace metals basis</li> </ul>	High-Purity Rhenium trioxide, ReO <sub>3</sub> □ CAS# 1314-28-9   ReO <sub>3</sub> □ Powders, Tablets □ Purity ≥ 99.999%, 5N Very High Purity □ Purity ≥ 99.99%, 4N High Purity □ Purity ≥ 99.9%, 3N High Purity □ Purity ≥ 99.0%, 2N Trace metals basis				
Rhenium-based alloys					
□ Rhenium-Nickel Alloys, Re-Ni □ DIN 17740:2002-09: Ni content in alloys □ Wires, sheets, tubes	Rhenium-Platinum Alloys, Pt-Re  PtRe14, Pt53Re47  Electrical contact materials, Pt-Re catalysts  ISO 11494: Pt content in alloys				
Other Standard Measurements					
☐ ASTM B329, Metal Powders Density ☐ Rhenium, CAS# 7440-15-5   Re ☐ Ammonium Perrhenate (APR), NH <sub>4</sub> ReO <sub>4</sub> ☐ Rhenium trioxide, CAS# 1314-28-9   ReO <sub>3</sub>	☐ Measurement Standards ☐ DIN 17034, ISO/IEC 17025, Laboratories ☐ DIN EN ISO 17294-2:2017-01: Environmental				



Froth Flotation	a mineral processing technique that separates valuable materials from tails based on differences in their surface properties, specifically their hydrophobicity (water-repelling) or hydrophilicity (water-attracting).
Electric Arc Furnace	a furnace that uses an electric arc to heat and melt metals, by passing an electric current through them. Key components are a furnace chamber, electrodes (e.g. graphite), a power source, and a system for charging and discharging the furnace.
Scrubber Columns	are devices used to remove pollutants or valuable minerals from exhaust gases, and they can utilize either absorption or adsorption.
Standardization Institutes	ISO: International Organization for Standardization EN: European Norm/ Standard ASTA: American Society for Testing Materials DIN: Deutsches Institut für Normung

### DISCLAIMER

#### Catalogue and B2B Centre

Presentations, product information, or other materials regarding MEDSTERN CANADA LLP contain timesensitive information. The information contained therein is only current as of the date presented. MEDSTERN expressly disclaims any obligations to review, update, or correct these materials after the date presented. MEDSTERN may update, amend, supplement, or otherwise alter the information contained in any such materials by subsequent presentations, product information materials, or other means without notice.

Certain statements made in catalogs or the MEDSTERN website are subject to risks and uncertainties, and MEDSTERN's actual offerings may differ from those indicated in such statements, including all product-specific information provided in catalogues pages, organized by product theme or application for download for your reference.



## smart business

#### Let us solve your B2B Challenges!

- Business Consulting
- Buyer and vendor Identification
- Go-to Market Services
- Technical Liaison
- Supply Chain Support
- B2B Mediation, ADR



#### about us

MEDSTERN CANADA is a B2B Mediation company located in

Suite 700 - 838 West Hastings Street Vancouver, BC, Canada. V6C 0A6

#### more B2B catalogues

www.medstern.ca/b2b-centre/

#### For Canadian Suppliers, Vendors



Book a consultation with Mr. Randal Clark, P.Eng., Ph.D. Senior Business Partner



Book a consultation with Mr. Axel Schaefer. MSc.. MBA Managing Partner, CEO

**book a consultation** >

